



WARNING

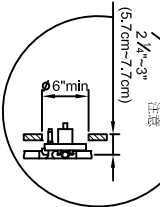

WARNING: Always turn off hot and cold water by turning the service stops clock-wise before starting. The hole on the wall should be at least 6" (15.2cm) in diameter to have easy remove the guard. The distance from wall to **Balance Valve** center is 2 1/4"-3" (5.7cm-7.7cm)

注意:開始安裝前,務必將冷熱供水開關關閉,同時鐘方向旋轉,即可關閉開關。牆上外露的孔徑至少須留直徑6"(15.2cm),以便於取出保護蓋。牆壁與平衡閥本體中心的距離保持 在2 1/4"-3" (5.7cm-7.7cm)。


INSTALLATION INSTRUCTION
Pressure Balanced Bath & Shower Single Handle
 壓力平衡單把手淋浴組安裝說明

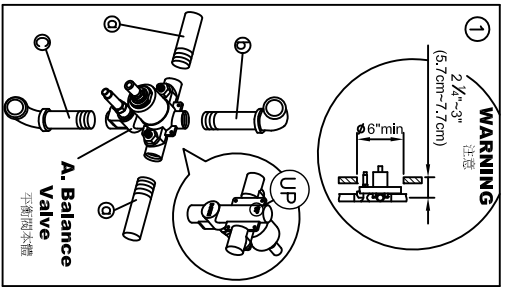


1) Install Valve and Shower Lines
 安裝牆壁內本體和淋浴供水管線
 Install with "UP" on valve pointing upward. **a/**, Connect hot and cold water supply lines **b/**, Install shower line . use 1/2" plug place in upper opening if not used . compound or tape all connections. **c/**, Assemble 1/2" tub spout pipe and 1/2" pipe elbow into bottom of the valve.
 安裝時參照本體上文字"UP"方向朝上並指向上。並連接冷熱供水管線。b/ 安裝淋浴供水管線,如果暫時不予使用,請用1/2"管塞塞住出水口處。c/ 先將所有接頭套上管牙膠或包覆止洩帶,再組裝1/2"水管上端到牆壁內本體上,同時並組裝1/2"彎頭到1/2"水管的下端。

2) Install Showerhead
 安裝淋浴頭噴頭
 Place **Showerhead Flange** over the thread-end of **Shoer tube**, apply pipe compound to **Shower tube** and 1/2" elbow, install **Shower tube** into elbow, Tighten the **Showerhead** by wrench.
 將法蘭蓋從淋浴管的接頭端端套入,再將其接頭牙端與牆內 1/2"彎頭內牙,塗上管牙膠或包覆止洩帶,接好鎖緊,最後裝上淋浴頭,用扳手鎖緊,即可完成淋浴噴頭安裝。

3) Install Tub Spout
 安裝出水口
 Apply pipe compound to nipple and elbow, then install the **Spout**.
 塗佈管牙膠或包覆止洩帶在牆內1/2"彎頭內牙及中間接頭的1/2"牙,再將出水口組裝上去即可。



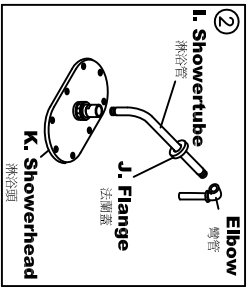


4) Remove the Plastic Guard and set Mixture Temperature Range
 移除塑膠保護蓋並設定混合龍頭溫度範圍
 First remove the Plastic Guard. **a/**, Make sure the **balance valve /ceramic cartridge** is on position of "off" before adjusting the **thermostatic controller (red ring)**. **b/**, pull out the **thermostatic controller (red ring)**. The "-", "0" and "+" are from cold temperature to mid-high or highest temperature. **c/**, push the red ring down to finish temperature setup process.
 首先移除塑膠保護蓋,並調整溫度調整定環(紅色套環)之前,必須確認平衡閥或陶瓷芯控制閥在關閉的位置。b/ 拔出溫度調整固定環(紅色套環)。- 到 + 是由冷溫度到中溫度或高溫度。c/ 套押入紅色套環在選定的溫度範圍,完成調整溫度的步驟。

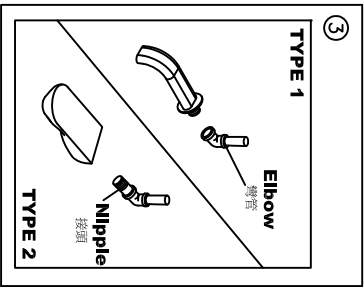

5) Turn the Stops on
 打開內控熱開關
 Turn integral stops , both hot and cold sides . Counter-Clock-Wise to open incoming water flow. Turn handle to full mix position. Let lines flush from tub spout for three minutes . check for leaks . adjust flow -rate by turning integral stops if water is dripping from showerhead. Now divert water to showerhead and let flush for one full minutes . adjust water mixture temperature as needed.
 反時鐘方向,打開內控熱熱左右開關,進水,調整中央控制旋把手到全開出水位置,經下方出水口排放數分鐘後,再適當使用內控熱開關調整出水溫度與出水水量,並檢查上方噴頭噴霧的情況,及出水口切洩開關功能。

6) Assemble Faceplate and Handle
 組合面板與把手
a/, Cover the **Faceplate** over the **Balance Valve** onto certain place. **b/**, Screw **Adaptor** onto **Balance Valve**, tighten it. **c/**, tighten the **Retaining nut with Gasket** by hand until the **Faceplate** exactly close to the wall. **d/**, Fix the **Handle** onto Valve Stem and tighten it with set screw by **Hexagon Key(1/8")**. **e/**, Pull out the diverter lift-stem and insert a tool (as screw driver) into its side-hole prevent it from turning as fig 6, then tighten the **Knob**.
a/ 蓋上面板於平衡閥本體。b/ 將接頭鎖至平衡閥本體,使用工具鎖緊。c/ 鎖緊定位螺帽與墊片,使面板穩固的貼於牆面。d/ 安裝把手,並鎖緊把手側邊的彈頭螺絲,完成把手安裝。e/ 如圖 6 拉出拉桿,以適當工具插入側孔固定拉桿,鎖緊拉桿彈頭,即可完成安裝。

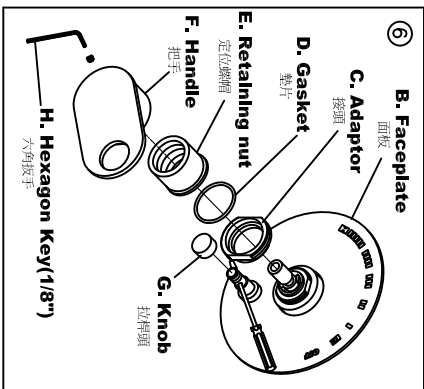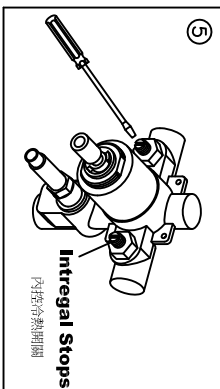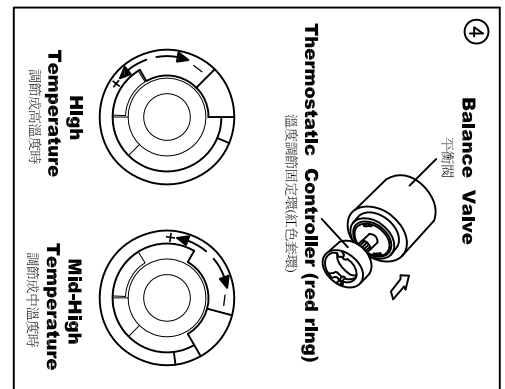

FIXING CONTENTS

組配件內容

A. Balance Valve (with guard) 平衡閥本體(含保護蓋)	B. Faceplate 面板	C. Adaptor 接頭	D. Gasket 墊片	E. Retaining nut 定位螺帽	F. Handle 把手	G. Knob 拉桿頭	H. Hexagon Key (1/8") 六角扳手	I. Shower tube 淋浴管	J. Flange 法蘭蓋	K. Showerhead 淋浴頭	L. Spout 出水口
								TYPE 1	or	TYPE 2	