

INSTALLATION INSTRUCTIONS

6927-40/41安裝說明

6927-40/41

PATENT NUMBER:
專利號碼:

1. Loosen the **Set Screw** under **Main Body** by **Hex Key** and remove **Fixing Bracket** for installation.

用隨附六角扳手鬆開本體下方螺絲,將固定基座取出。

2. Select proper position for product installation and use **Fixing Bracket** as a template to mark centers of mounting holes on wall horizontally as figures shown.


選取預定安裝的位置,以固定基座比對鑽孔的距離,並在牆壁畫上預定鑽孔記號,且確認鑽孔位置在同一水平線上。

3. Use a 6mm drill-bit, drill in marked positions to 4cm depth; insert the **Plastic Anchors** to the holes, and then fix the **Fixing Bracket** with **Wall Screws**.


當安裝在水泥牆時,使用6mm鑽頭,鑽孔深度4公分,嵌入塑膠塞,並使之齊平於牆面,將固定基座以螺絲鎖緊於牆上。

4. Slide **Main Body** over **Fixing Brackets** and then tighten **Set Screws** under **Main Body** by **Hex Key**.

使本體能順利套進固定基座後,用隨附六角扳手鎖緊本體下方的螺絲,完成安裝程序。

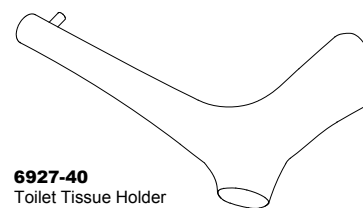

6927-40
Toilet Tissue Holder

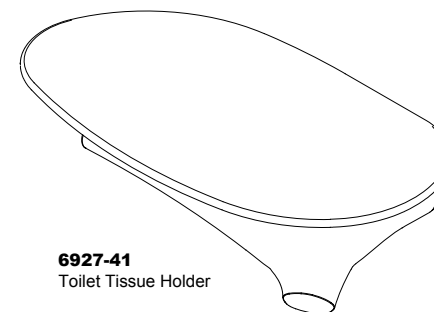

6927-41
Toilet Tissue Holder

